

# Swash 300

 
## OWNER'S MANUAL



# Swash 300

## OPERATION

- Display
- Controls

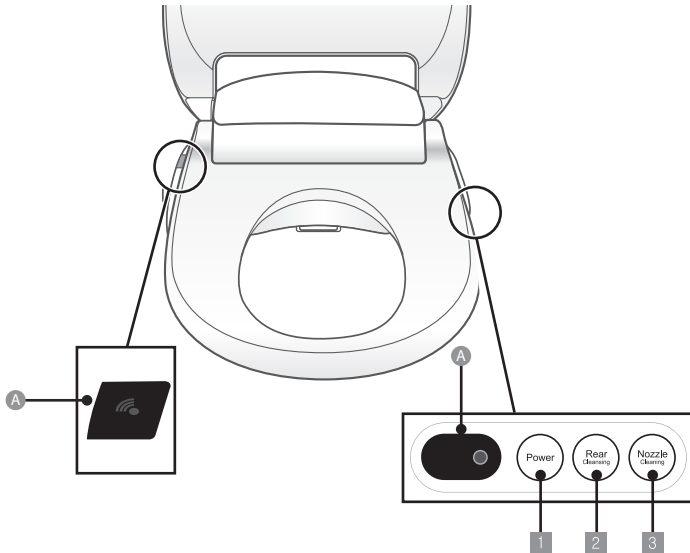

### Seat Display



- A Remote IR Receiver**  
Receives signal from remote control

### Auxiliary control panel



- 1 'Power' button**  
Turns the product ON/OFF. Press and hold the button for more than 2 seconds to turn off.

\* If the 'Power' button is pressed while the front, rear cleansing function is operating, the cleansing function is stopped and the bidet changes to standby mode.



- 2 'Rear Cleansing' button**  
Selects the rear cleansing function.

 


- 3 'Nozzle' Cleaning button**

When pressed, the nozzles will do a continuous self-clean cycle for up to 2 minutes. To stop the nozzle cleaning function, press the "Power" button on the side of the seat or "Stop" on the remote.

## OPERATION

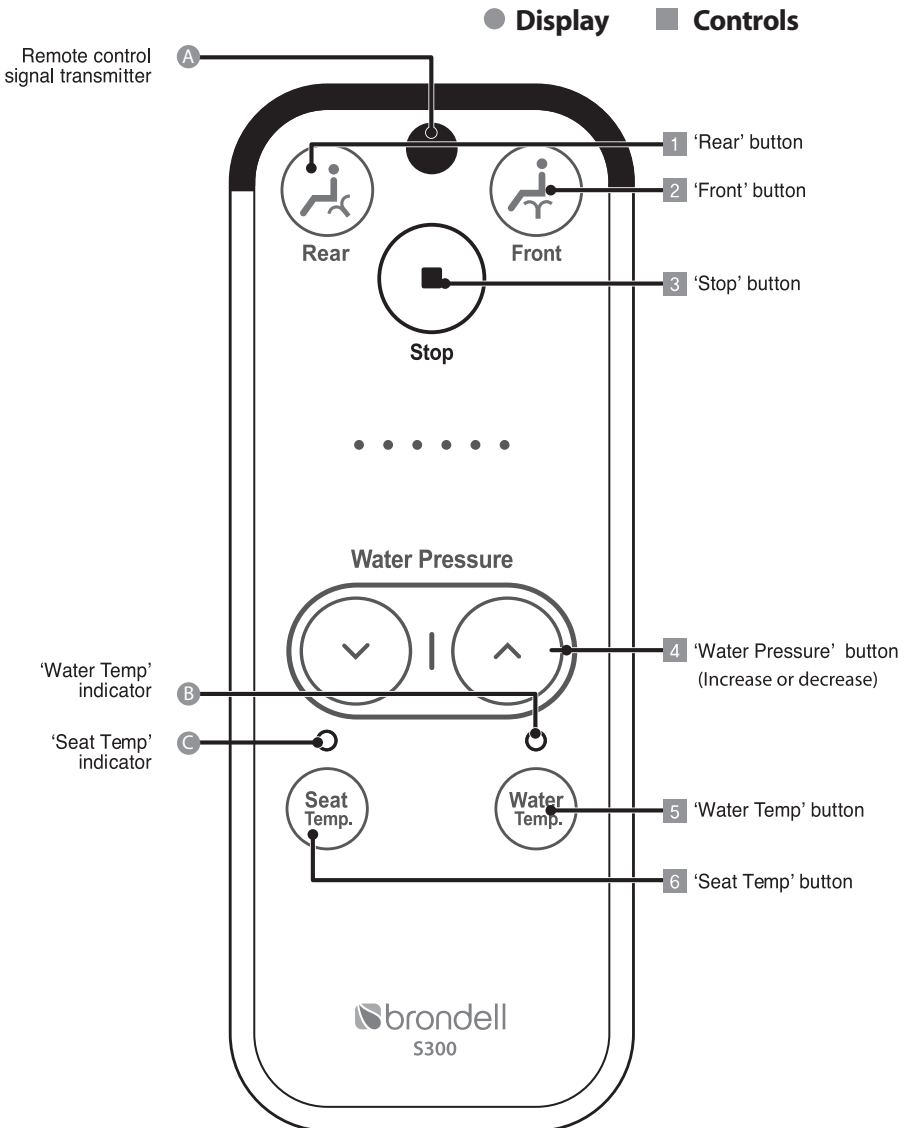


### Quick Reference Guide: Remote Control






 


## OPERATION

### Quick Reference Guide: Remote Control (continued)

#### Display

-  **A Remote control signal transmitter**  
Transmits the signal when a remote control button is pressed.
-  **B 'Water Temp.' indicator**  
Whenever the 'Water Temp.' button is pressed, the temperature control indicator cycles through the following order: L(Blue)→M(Pink)→H(Red)→Off.
-  **C 'Seat Temp.' indicator**  
Whenever the 'Seat Temp.' button is pressed, the temperature control indicator cycles through the following options: L(Blue)→M(Pink)→H(Red)→ Off.

#### Controls

-  **1 'Rear' button**  
Use this button to use the rear cleansing function.
-  **2 'Front' button**  
Use this button to use the front cleansing function.
-  **3 'Stop' button**  
All currently operating functions will stop.
-  **4 Water Pressure button**  
Water Pressure Button  
You can control water pressure when operating the rear or front cleansing functions in 3 levels (L-M-H)
-  **5 'Water Temp.' button**  
Use this button to control the water temperature. Whenever the 'Water Temp.' button is pressed, you can control the water temperature in 4 levels (L→M→H→Off).
-  **6 'Seat Temp.' button**  
Use this button to control the seat temperature. Whenever the 'Seat Temp.' button is pressed. You can control the seat temperature in 4 levels (L→M→H→Off).

## OPERATION

### Using the Swash

**Important note:** The wash functions will not work unless the body sensor in the seat detects someone sitting down (skin conductivity sensor). To override the safety sensor, please refer to the section in the manual called "Programming Special Modes."

**Important note:** The remote control will not operate the Swash if the batteries are weak, dead, or not installed properly (remote requires 3 x AAA batteries to function).

### Warm Water Wash

Sit on the seat and press the FRONT or REAR button on the remote to begin water flow. The nozzles will self-clean and purge a small amount of water which will last for several seconds prior to starting the wash function. The front or rear wand will then extend and wash for approximately 1 minute, then turn off automatically.

To keep the wash continuing longer than 1 minute, press the FRONT or REAR button again during the cleansing cycle. Each time you press the button during the cleansing cycle the 1 minute cycle starts again.

If you would like to stop the wash before a 1 minute cycle ends, press STOP button to discontinue flow.

After the cleansing cycle, the nozzles will perform a self clean cycle purging water for approximately 5 seconds.

# Swash 300

## OPERATION

### **Water Flow / Water Pressure Adjustment**

While the cleansing function is operating, press the Water Pressure “up” and “down” buttons on the remote control to increase or decrease the water pressure of the spray. There are 3 water pressure levels: Low – Med – High.

### **Adjusting Seat and Water Temperature**

#### ***Seat Temperature***

Press Seat Temp. button to adjust the seat temperature to desired level. There are four temperature levels indicated by lights on the remote above Seat Temp. button: Low(blue) – Med(Pink) – High(Red) – Off(No Light).

#### ***Water Temperature***

Press Water Temp. button to adjust temperature to desired level. There are four temperature levels indicated by lights on the remote above Water Temp. button: Low(blue) – Med (Pink) – High (Red) – Off (No Light)

**Note:** Because the Swash 300 utilizes a reservoir heating tank, water temperature adjustments may take a few minutes to take effect.

### **Auxiliary Controls**

There are 3 auxiliary buttons on the side of the Swash to be used if remote is unavailable and to set Swash Special Modes:

1. Power button – Turns the product On/Off. Press and hold the button for at least 2 seconds to turn off the Swash. Note: if the power button is pressed while front or rear cleansing is operating, the cleansing function will stop.
2. Rear Cleansing – Selects the rear cleansing function.
3. Nozzle Cleaning – The nozzles will do a continuous self-clean cycle for up to 2 minutes. To stop the nozzle cleaning function, press the “Power” button on the side of the seat or “Stop” on the remote.

### **Programming Special Modes**

To program any of the following Special Modes, the seat will need to be unplugged from the electrical outlet. Read over the instructions before selecting a Special Mode.

## OPERATION

### **Selecting/Cancelling Eco Mode**

1. Press and hold the "Rear cleansing" button on the side of the product and plug the seat back into the electrical outlet. (An alarm will sound and the LED light will turn on.)
2. Press the "Front Cleansing" button on the remote control to turn on or off the Eco Mode. Each time the button is pressed, it alternates between ON and OFF.
  - a. If the bell rings once, Eco Mode is ON.
  - b. If the bell rings twice, Eco Mode is turned OFF.
3. To save the setting, press the Power button on the side of the product. If no button is pressed for 10 seconds, the setting will automatically be saved.

### **Selecting/Cancelling Silent Mode**

1. Press and hold the "Rear cleansing" button on the side of the product and plug the seat back into the electrical outlet. (An alarm will sound and the LED light will turn on.)
2. Press the "Stop" button on the remote control to turn on or off Silent Mode. Each time the button is pressed, it alternates between ON and OFF.
  - a. If the bell rings once, Silent Mode is ON.
  - b. If the bell rings twice, Silent Mode is OFF. (The seat will now make a "ding" sound each time a button is pressed on the remote or side of seat.)
3. To save the setting, press the Power button on the side of the product. If no button is pressed for 10 seconds, the setting will automatically be saved.
4. Finally to activate your new Silent Mode settings, power the Swash 300 off then back on again. Your new settings are now active.

### **Selecting/Cancelling Seat Sensor Lock Mode**

1. Press and hold the "Rear cleansing" button on the side of the product and plug the seat back into the electrical outlet. (An alarm will sound and the LED light will turn on.)
2. Press the "Rear Cleansing" button on the remote control to turn on or off the Seat Sensor Lock Mode. Each time the button is pressed, it alternates between ON and OFF.
  - a. If the bell rings once, the Seat Sensor is locked ON. (Someone will need to be sitting on the seat in order for the wash functions to work.)
  - b. If the bell rings twice, the Seat Sensor is turned OFF.
3. To save the setting, press the Power button on the side of the product. If no button is pressed for 10 seconds, the setting will automatically be saved.