



Ref.	Part Description	65D-TNT 65PJ-TNT 65PJADJ-TNT
<b>UPPER ASSEMBLY</b>		
1	Fulcrum Pin	100348
2	Arm Spring Assembly PJ	(A) 102570
3	Arm Spring	100369
<b>NOZZLES (Specify nozzle size when ordering)</b>		
4	ADJ Nozzle Assembly	100385
5	Pin	100203
6	Spring	100136
7	Range Nozzle	100382
<b>TRIP MECHANISM</b>		
8	Trip Assembly, Upper	100370
9	Upper Trip	(100371)
10	Trip Spring	100372
11	Trip Assembly, Lower	100373
12	Spacer Washer (2)	100376
13	E-Ring	100377
14	Trip Shaft	100365
<b>BEARING ASSEMBLY</b>		
15	Bearing Assembly (NPT Assy)	106297
16	Bearing Spring	106237
17	Metal Top Seal Washer	100312
18	Top Seal Washer (White)	100313
19	Friction Collars (2)	105774
20	Bearing Sleeve (NPT)	105907
20	Bearing Sleeve (BSP)	105906
21	Bearing Washer (2) (Black)	(104038)
22	Wear Washer (Orange)	104037
23	Bearing Nipple	100390

(A) 65D arm is no longer available, use current PJ arm.  
Call Ag customer service to order parts at  
1-800-435-5624.

Note: Part numbers enclosed in brackets ( ) are not available individually, but may be sold in assemblies or kits.